

## SECTION 2 GENERAL

### 2.4 SNOW REMOVAL AND DISPOSAL *(rev. 10/10/2022)*

Snow removal from runways, taxiways, aprons, and roads at FAI is performed in accordance with the Airport Snow and Ice Control Plan, as stated in the Airport Certification Manual and required by Federal Aviation Regulation Part 139. A copy of this document is available for inspection through the Airport Operations office.

The Airport participates in a Snow and Ice Control Committee (SICC) to provide feedback and make recommendations to snow and ice removal operations and Snow and Ice Control Plan (SICP) updates. To receive an invite to SICC meetings please contact the Chief of Airport Operations who is the chairperson. Should an air carrier wish to provide input regarding snow removal from runways, please contact the Chief of Airport Maintenance through the Airport Communications Center at (907)474-2530 or Chief of Airport Operations at (907)474-2550.

#### **Land Lease Tenant Responsibilities – East/West Ramp**

Snow removal from leased lots is not part of the Airport Snow and Ice Control Plan. As specified in individual lease agreements, snow removal for leased lots is the sole responsibility of the lessee. No lessee is authorized to push snow off their leasehold onto another lot, or an airport taxiway or ramp. Lessee may transport snow to the designated area and must ensure that all snow is free from trash and contaminants. Contact Airport Operations at (907)451-2300 for these locations.

Operation of heavy equipment on the Airport Operations Area (AOA) for the purpose of snow removal, by other than Airport Maintenance personnel, **is strictly prohibited**, except upon the prior approval of the Chief of Airport Maintenance or designee and Chief of Operations or designee. Airport Operations offers ramp familiarization training and may be contacted at (907)451-2300.

If not removed, storage of snow must be on the leasehold. Snow may not be positioned in a manner that could present a hazard to aircraft operating on the AOA. Snow shall be stockpiled so that a six foot clear zone can be maintained on both sides of all security fences. Assistance in removing snow from leased property is not an Airport obligation. Snow contaminated with debris, (i.e. rocks or hazardous material) will not be handled by the Airport.

#### **Tiedown Permittee Responsibilities – East Ramp**

FAI tiedown permittees may remove snow from their spaces and position it for later removal by Airport staff, provided it is kept as close as possible to the tiedown space. Snow may not be moved or positioned across adjoining tie-down spaces, taxiways, taxilanes, parking rows, nor in any manner that creates a hazard or blocks vehicle or aircraft access to the parking row. Snow piles must be kept as low as possible, no higher than 36". FAI staff will remove these piles as the workload permits.

Snow removal on individual tiedown spaces may be accomplished by garden tractors, snow blowers, etc...**UNDER NO CIRCUMSTANCES MAY SNOW BE BLOWN OR OTHERWISE MOVED ONTO OTHER TIEDOWN SPACES OR INHIBIT ANY AIRCRAFT OPERATIONS**